

Shades4LED Lens Retainer Installation

www.shades4LED.com

For Warranty Information, please visit our website

- Applies to Shades4LED Items K0005, K0005B, and K0006 for Kichler Design Pro LED Accent Models: 1573x, 1574x, and 1575x.
- Each Lens Retainer requires two (2) screws (included).

1. STEP ONE:

Loosen and Remove two (2) Screws (opposite of each other) using the included tool.

See figure below:



2. STEP TWO:

Align Lens Retainer's main hole and eyelet over existing two (2) holes in light.

Insert two (2) new screws (included with this order) through the Lens Retainer's existing hole and eyelet, and advance them half way, using the included tool. At this point, screws must be threaded enough to hold Lens Retainer in place, but loose enough to pivot Lens Retainer to and from the eyelet screw.

See figure below:



3. STEP THREE:

Place colored filter onto light lens.

Rotate the Lens Retainer over the colored filter and back into position so the eyelet mates against its screw.

When the Lens Retainer and colored filter are in place, lightly snug down both screws (remember, "lightly snug" means "just enough to hold the Lens Retainer in place.") *Note: Excessive tightening of the screws will damage your Lens Retainer as well as potentially damage the threads of your Kichler Light Fixture – so use care and precision when loosening or tightening these screws.*

See figure below:

